

LIGHTS AND ELECTRICAL

BRONZE
Lubricant service &
health check
from
£135

SILVER
12,000 miles
/ 13 months
from
£195

GOLD
24,000 miles
/ 24 months
from
£250

SYSTEM

1: Check operation of exterior lights	X	X	X
2: Check headlight alignment			X
3: Check rear reflectors		X	X
4: Check operation of instrument warning lamps	X	X	X
5: Check illumination of dash and heater control lamps		X	X
6: Check battery condition and connections		X	X
7: Check horn	X	X	X
8: Test / advise alternator output and security			X

INTERNAL / VISION

9: Check door / bonnet lock operation and lubricate locks, hinges and catches		X	X
10: Check windscreen wiper and washer condition and operation	X	X	X
11: Top up windscreen washer reservoir with additive if required	X	X	X
12: Check / advise pollen filter condition, replace if necessary*		X	X
13: Check air conditioning system / temperature if applicable		X	X

ENGINE

14: Drain engine oil and refill*	X	X	X
15: Replace oil filter	X	X	X
16: Replace air filter		X	X
17: Replace fuel filter (if fitted and external from fuel tank)			X
18: Check / advise general oil leaks	X	X	X
19: Check / advise coolant level and antifreeze strength	X	X	X
20: Top up antifreeze if required		X	X
21: Check coolant hoses for leaks and condition, incl. header tank	X	X	X
22: Check condition and tension of auxiliary drive belts (excl. timing belt)		X	X
23: Spark plugs changed according to mileage*			X
24: Check / clean HT leads and components (if fitted)		X	X
25: Check / adjust valve clearances (if fitted)			X
26: Visual check of fuel system (incl. tank and cap)		X	X
27: Check timing belt replacement interval & report if due according to mileage / age	X	X	X

BRAKES

28: Check brake servo operation	X	X	X
29: Check / advise brake fluid level and boiling point	X	X	X
30: Top up brake fluid if required	X	X	X
31: Visual check of brake pads for wear or damage	X	X	X
32: Visual check of brake callipers for leaks and security	X	X	X
33: Visual check of brake discs, shoes and cylinders for wear or damage	X	X	X
34: Visual check of brake pipes and hoses	X	X	X
35: Check operation of handbrake	X	X	X
36: Check security of handbrake linkages and travel and adjust if required		X	X

STEERING/SUSPENSION

37: Check condition of road springs	X	X	X
38: Check power steering fluid reservoir	X	X	X
39: Check steering / suspension components for wear and corrosion	X	X	X
40: Check steering rack gaitors condition		X	X
41: Check shock absorber condition and mounting, report any leaks		X	X
42: Check wheel bearings for excessive play or noise		X	X

STEERING/SUSPENSION

43: Check drive shaft gaitors for security and report any leaks		X	X
44: Check gear box fluid level manual / automatic differential (if applicable)		X	X
45: Check / adjust clutch operation	X	X	X
46: Check for transmission oil leaks	X	X	X
47: Check condition of clutch cable (where visible)	X	X	X

EXHAUST

48: Check / advise condition of exhaust and mountings	X	X	X
---	---	---	---

TYRES / WHEELS

49: Check tyre condition and tread depth (incl. spare)	X	X	X
50: Check / adjust tyre pressures (incl. spare)	X	X	X
51: Remove all road wheels and check flanges and mountings			X
52: Check wheel nut torque to manufacturer's specification	X	X	X

TYRES / WHEELS

53: Carry out engine management system scan		X	X
54: Reset vehicle service light where applicable	X	X	X
55: Stamp service book	X	X	X